


CB016F001A(RA-277) Assembly Instructions

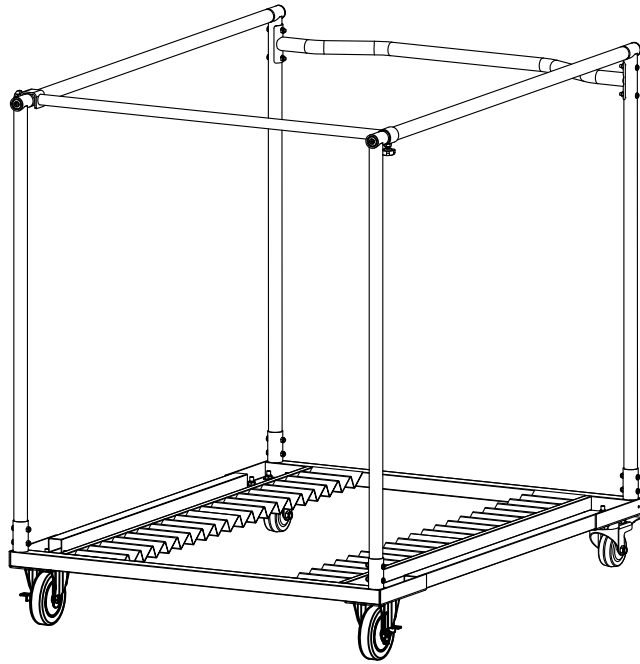

PART LIST

PART	DESCRIPTION	DRAWING	Q'TY
A	Base		1
B	Support pole		2
C	Back pole		2
D	Upper tube		2
E	Armrest		1
F	Adjustable cross tube		1
G	Fixed-direction wheel with brake(5")		2
H	Swivel wheel with brake(3")		2
I	Adjustable bolt		2
J	Steel washer		4
K	Bolt(M6*42)		12
L	Bolt(M6*25)		4
M	Bolt(M8*20)		16
N	Steel washer(1.5*8.5*21)		32
O	End cup nut(M6)		12
P	Nut(M8)		16
Q	Spanner(10*13)		1
R	Allen wrench(4MM)		1
S	Spanner(13.5*60*112)		1

Step 1:

At the front of Base , see arrow assigned.

(a) put N on M firstly , assemble Gx1pc with M&Nx4pcs,another Nx4pcsxP x4pcs to A.


(b) Repeat step (a) assemble two wheels to base.

Step 2:

At the back of Base , see arrow assigned.

(a) Put N on M firstly , assemble Hx1pc with M&Nx4pcs , another Nx4pcs xPx4pcs to A.


(b) Repeat step (a) , assemble two wheels to base.

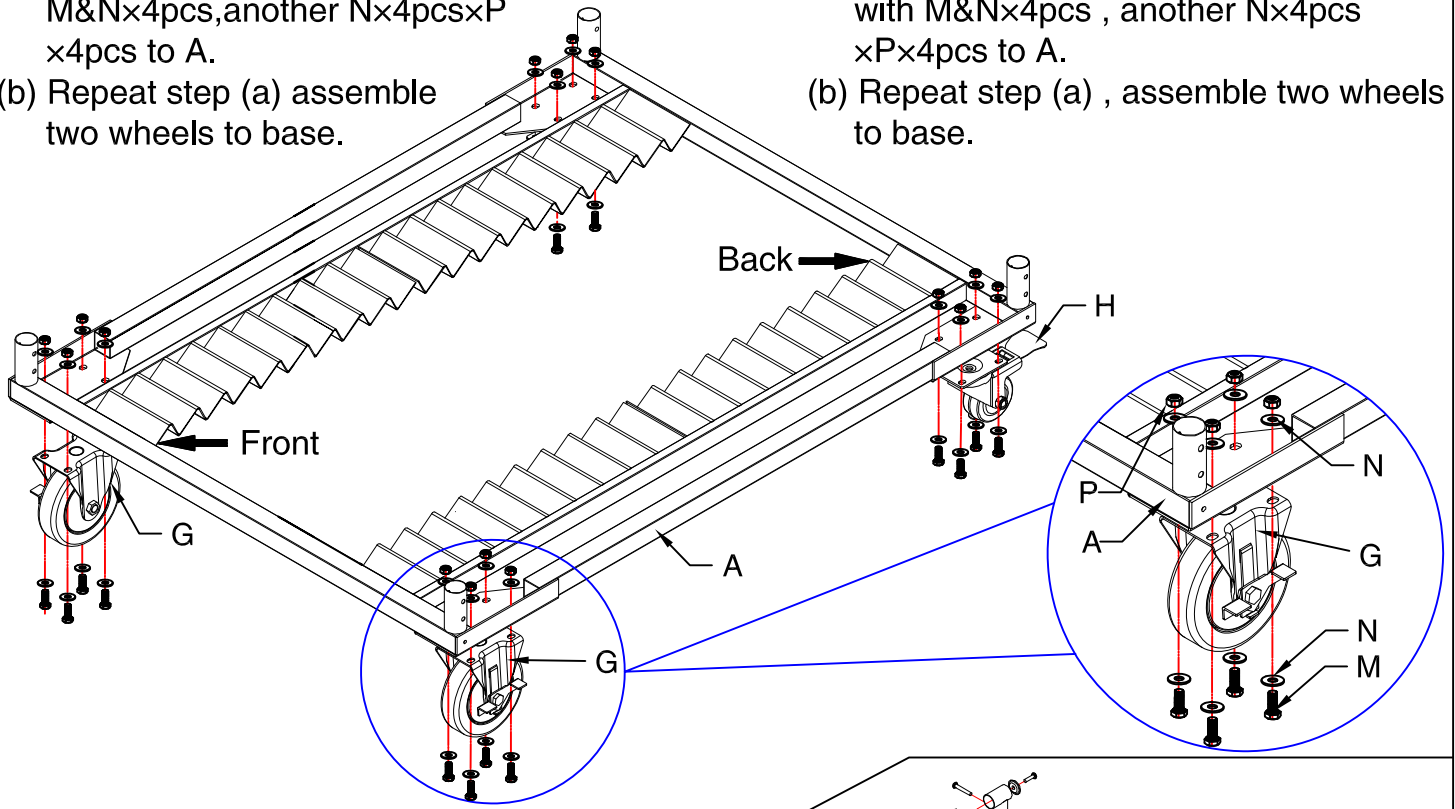

Step 3:

(a) Insert Cx2pcs to sleeve tube above G on A , assemble Cx2pcs to A with Kx4pcsxOx4pcs.

(b) Insert Bx2pcs to sleeve tube above H on A , assemble Cx2pcs to A with Kx4pcsxOx4pcs.

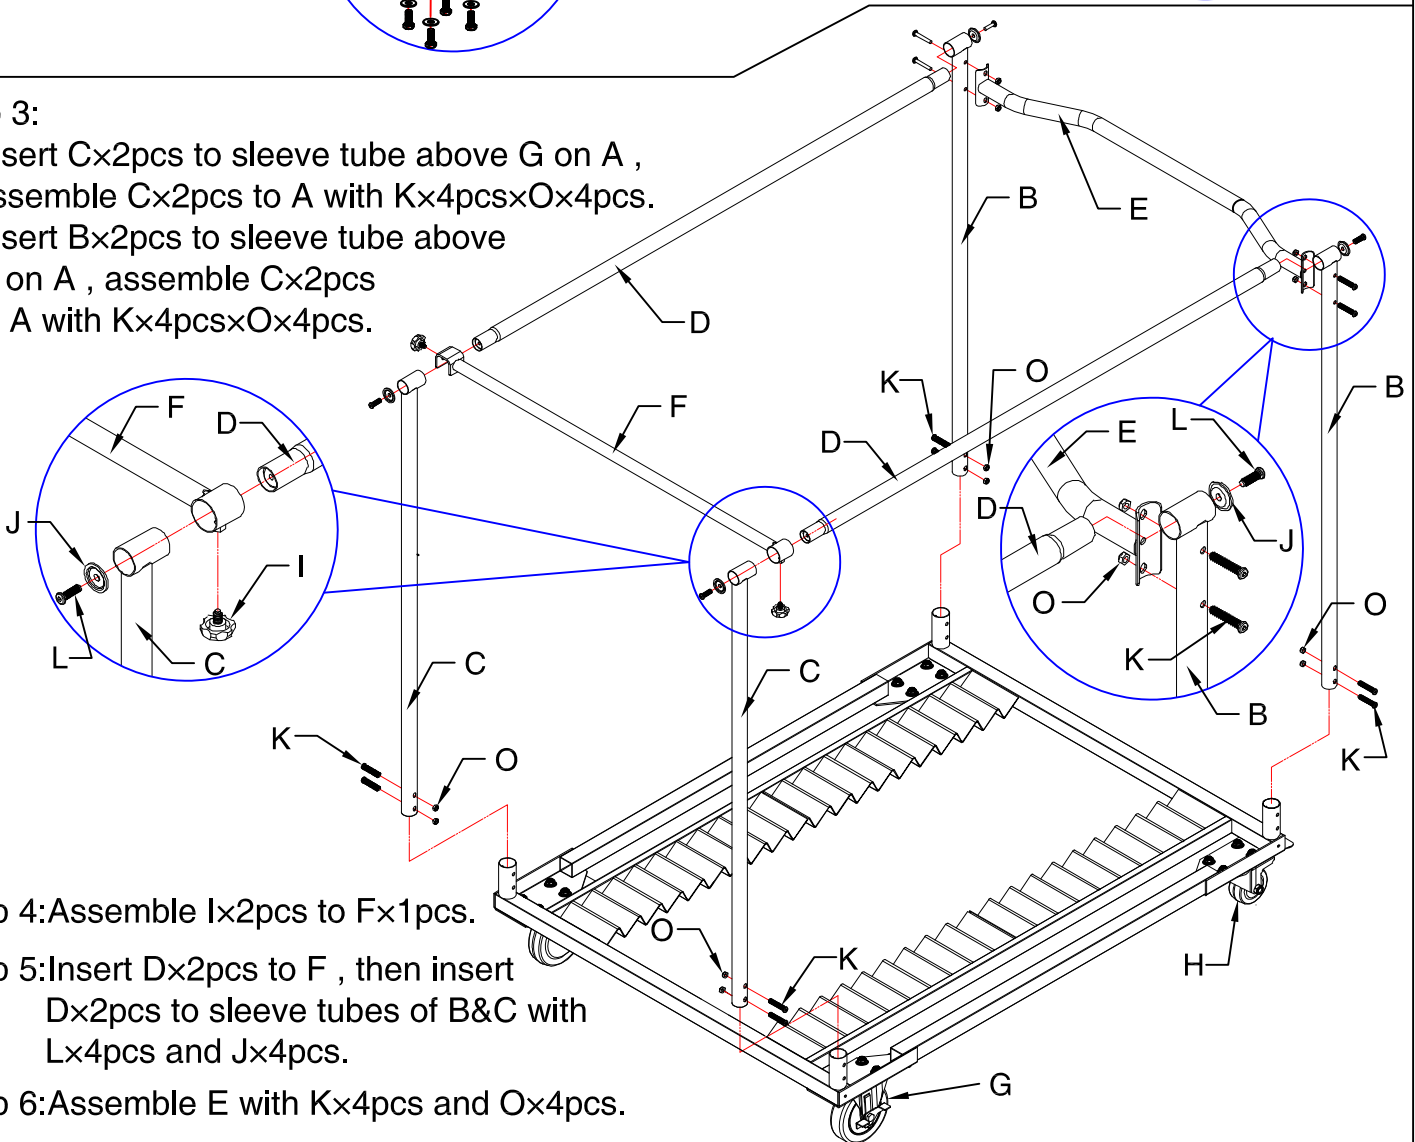

Step 4: Assemble Ix2pcs to Fx1pcs.

Step 5: Insert Dx2pcs to F , then insert Dx2pcs to sleeve tubes of B&C with Lx4pcs and Jx4pcs.

Step 6: Assemble E with Kx4pcs and Ox4pcs.